



**Visit TPI, The Value Leader™ at:
www.tpi-thevalueleader.com**

Test Products International Inc.
Headquarters
9615 SW Allen Blvd
Beaverton OR 97005
USA
503-520-9197 • Fax 503-520-1225
email: info@tpi-thevalueleader.com

Test Products International Ltd.
342 Bronte St. South Unit #9
Milton, Ontario L9T 5B7
Canada
905-693-8558 • Fax 905-693-0888
email: info@tpicanada.com

Test Products International (Europe) Ltd
Longley House
International Drive
Southgate
Crawley
West Sussex
RH10 6AQ
Tel: +44 (0) 1293 530196
Fax: +44 (0) 1293 531870
e-mail: contactus@tpieurope.com



This symbol indicates that at the end of its life this product must not be disposed of in household waste. This equipment should be environmentally disposed of. Please contact your supplier or manufacturer who will be able to advise you on the correct method of disposal.



The Value Leader™
www.tpi-thevalueleader.com

TPI 85 MULTI-FUNCTION EARTH-LOOP TESTER



The Value Leader™
www.tpi-thevalueleader.com

EC Declaration of Conformity

In accordance with BS EN ISO/IEC 17050-1

We, Test Products International Europe Ltd.

Of Longley House, International drive, Crawley, West Sussex RH10 6AQ
declare that:

Equipment: **Multi-Functional Earth – Loop Tester**

Model Number: **TPI 85**

in accordance with the following Directives:

73/23/EEC The Low Voltage Directorate

89/336/EEC The Electromagnetic Compatibility Directive

Has been designed and manufactured to the following standards:

BS EN 61326 Electrical equipment for measurement, control and laboratory use. EMC requirements.

BS EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use. General requirements.

BS EN 61010-031 Safety requirements for electrical equipment for measurement, control and laboratory use. Safety requirements for hand held probe assemblies for electrical measurement and test.

I hereby declare that the equipment named above has been designed to comply with the relevant sections of the above referenced standards. The unit complies with all the essential requirements of the Directives.



Signed by E. Quigley, Managing Director.

Test Products International Europe Ltd., at TPI Europe on 15th November 2005.



Appendix C: Guarantee

Your TPI 85 Multi Functional Earth Loop Tester is guaranteed free from defects in materials and workmanship for 3 Years.

Covered by TPI:

Repair parts and labour; or replacement of the product at the option of TPI. Normal transportation charges to the purchaser are also covered.

Not covered by TPI:

Damage to the product which is the result of abuse, improper use or maintenance is not covered. Any other expenses, consequential damages, incidental expenses including damages to property are not covered. Transportation expenses to the customer are not covered.

To obtain warranty performance: - Include with the product your name, address, phone number, written description of the problem and proof of purchase date. Carefully package and return to TPI.

Warning:

There are no user serviceable or replaceable parts within the instrument. Removal of the cabinet cover will invalidate the warranty.

This guarantee does not affect your statutory rights.

Appendix B Specification

Wiring Test

Detects missing E or N
Detects L-E or L-N swap

Polarity Test

Detects Live – Earth phase reversal by use of touchpad
Fault indicated by chart on front of instrument

Line Voltage Measurement

Range	LED
< 207V AC	Low (Red)
207 – 253V AC	Standard (Green)
> 263V AC	High (Red)

Loop Test

Result displayed on 6 LED's
Test Current <15mA at 253V AC

Range	LED	Accuracy
< 1 Ω	Green	10% \pm 0.3 Ω
< 10 Ω	Orange	
< 100 Ω	Orange	
< 200 Ω	Orange	
> 200	Red	

Standards

CE Marked
BS EN 61010-1 300V CAT III
BS EN 61010-031
BS EN 61326 EMC

Important: This instrument is designed to operate safely on domestic low voltage alternating current (AC) systems only, which normally operate at around 230 V AC. It should not normally be subjected to voltages above 300 V AC nor used on Direct Current (DC) circuits.

Contents

1. Introduction
2. Why Measure Earth-Loop Impedance
3. Instrument Overview
 - 3.1 Front View
 - 3.2 Top View
 - 3.3 Test Lead
4. Using the Multi – Function Earth Loop Tester
 - 4.1 Correct Wiring Indicator
 - 4.2 Voltage Indicator
 - 4.3 Earth - Loop Test
 - 4.4 Polarity Test

Appendix A: Fault Conditions Indication Chart

Appendix B: Specification

Appendix C: Guarantee

1. Introduction

Thank you for purchasing TPI brand products. The TPI 85 Multi-Function Earth Loop Tester is a state of the art, easy to use instrument that is designed to test the safety of an electrical appliance/installation. It can be used prior to or following any adjustment, replacement of components, or fault finding operations.

The instrument can be used to indicate in the order shown:

- the correct or incorrect wiring of an electrical circuit
- indicate the correct or incorrect voltage of the circuit
- indicate the Earth - Loop Impedance of the circuit
- indicate correct or incorrect polarity

The instrument is ruggedly constructed and comes with a 3 Year Limited Guarantee (See Appendix C).

This manual will guide you through the functions of the TPI 85 which will give you many years of reliable service.

Your TPI 85 Multi-Function Earth Loop Tester comes complete with:

- One Test lead incorporating a UK style 3 pin plug (fitted with a 13 Amp fuse) at one end and a IEC type connector fitted at the other end, which interfaces with the instrument for testing via Socket Outlets
- A second test lead which is equipped with 3 separate probes to enable testing via connections other than where a Socket Outlet is present
- Instruction Manual
- Carry Case

2. Why Measure Earth Loop Impedance?

Whereas a digital multi-meter can be used to prove correct wiring, voltage and polarity, the checking of Earth-Loop Impedance can only be achieved using an instrument specifically designed for this purpose.

The term 'Impedance' is defined as "the delay, or the preventing of progress of something". In the case of electricity, it is better defined as "the opposition in a circuit to the flow of alternating current, consisting of resistance and reactance".

The TPI Multi-Function Tester is designed to indicate 'Earth Loop Impedance', which can best be explained as a function that can measure the resistance and reactance to the flow of an alternating current in an electrical circuit.

Whereas measuring 'Resistance to Earth', using a digital multi-meter will show that there is a good connection with low resistance, between the two points being measured; it does not prove how efficient the path to earth will be under fault conditions.

5. Calibration & Servicing.

It is recommended that the unit is checked and calibrated as annually. If required, TPI provide a service for the checking and recalibration of instruments. Please consult Test Products International for further details.

Appendix A: Fault Conditions Indication Chart

The chart below details the correct and fault conditions as indicated by the various combinations of LED's as shown by the 'Correct Wiring Indicator' display

Display	Tone	Condition Indicated
	Continuous (3 seconds)	Correct
	Intermittent	L & E reversed, or L, N, E Incorrectly connected
	Intermittent	L & N reversed, or L, N, E Incorrectly connected
	Intermittent	Neutral Fault, or L & E Incorrectly connected
	Intermittent	Earth Fault, or L & N reversed
	Intermittent	Live Fault, or N & E Incorrectly Connected
	None	No mains present (confirm against known power source)

Key:

- Continuous display of LED to indicate correct condition
- ✳ = Flashing display of LED to indicate fault condition
- = Blank display to indicate no power to LED
- ✳ = green flashing LED. ✳ = Orange flashing LED.
- ✳ = Red flashing LED

4.4 Polarity Test.

Upon completion of the Earth-Loop Impedance Test, a Polarity Test should be conducted so as to confirm that the supply system is correctly connected. Place a finger firmly on the 'Touch Pad' (See Figure 6) and maintain pressure for a few seconds. The 3 LED's of the 'Correct Wiring Indicator' will remain green to indicate correct polarity. Incorrect Polarity is indicated by the 3 LED's intermittently flashing Red.

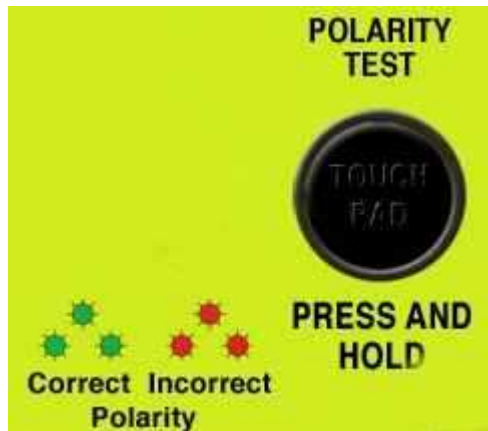


Figure 6.

Any failures should be investigated. This will normally be the responsibility of the electricity supply company who should be advised accordingly.

Checking the Earth-Loop Impedance will measure the resistance of the earth path used by a current flow during a fault condition. It will ensure that during any fault condition, the flow of electricity to earth will be sufficient to cause the circuit protective device e.g. fuse or circuit breaker, to rapidly halt the flow of electricity through that circuit.

2. Instrument Overview

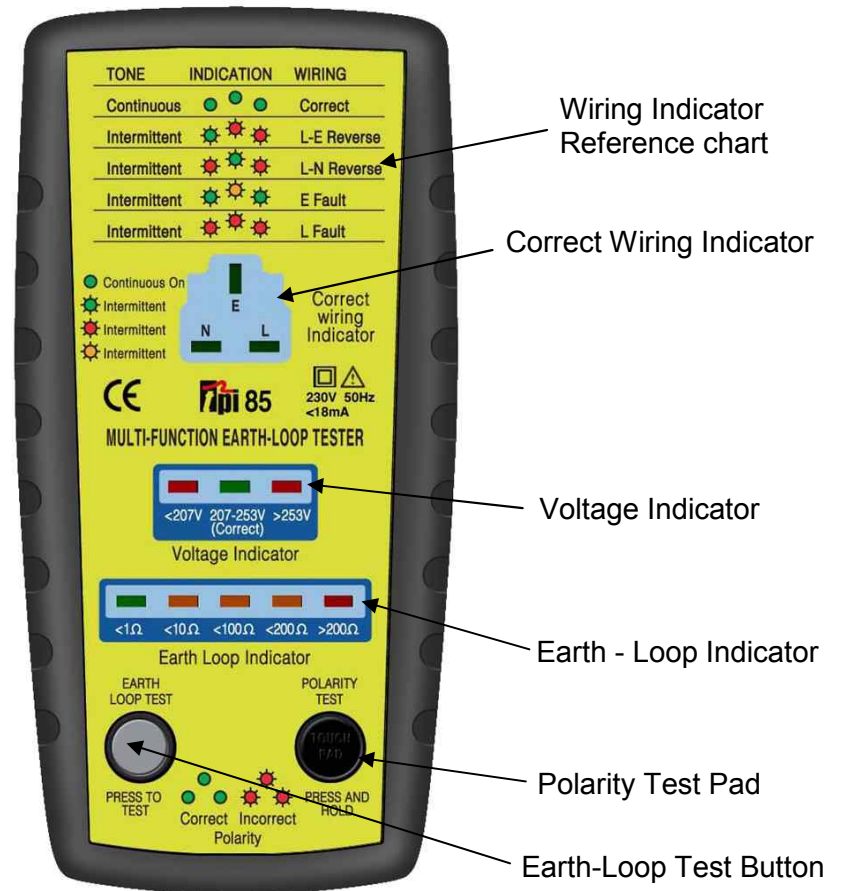


Figure 1.

3.1 Front View (see Figure 1)

Correct Wiring Indicator – Indicates the correct wiring of the socket outlet under test by displaying three green Light emitting Diodes (LED's) and a continuous tone for 3 seconds. Incorrect wiring is indicated by a series of orange or red flashing LED's and an intermittent tone being emitted.

Wiring Indicator Reference Chart – Helps identify the most common fault conditions and how they are displayed by the instrument.

Voltage indicator – Indicates the range of the voltage using the ranges specified by British Standard BS7697:1993 (Nominal voltages for low voltage public electricity supply systems).

Earth – Loop Indicator- On pressing the Earth – Loop Test Button, an indication of the range of the earth – loop impedance will be displayed.

Polarity Test Pad – On completion of all other tests, firmly pressing the 'Test Pad' will confirm the polarity of the supply system.

Earth – Loop Test Button – pressing this button starts the Earth – Loop test.

WARNING:

The TPI 85 Multi-Function Earth Loop Tester is a mains powered instrument and therefore does not incorporate an internal battery. There are no user serviceable parts inside the instrument and therefore the rear case of the instrument should not be removed.

Acceptable Earth-Loop Impedance results depend on the type of circuit and the circuit protective device (fuse, Miniature Circuit Breaker [MCB] or Residual Current Device [RCD]) employed to protect the circuit under fault condition. Recommended Earth Loop Impedance results are detailed in British Standard 7671 (IEE Regulations) however, for guidance the indications displayed by this unit are discussed below:

<1 Ω Any Earth Loop Impedance values of less than 1 Ohm can be considered acceptable and should be found in about 90% of most domestic electrical installations.

<10 Ω This is still normally considered to be an acceptable reading, but it may indicate a loose earth connection and it may be worth checking the adequacy of the connection at the point of test. If the point of test is at the extreme of the electrical circuit, then earth – loop impedance readings can be expected to be higher.

<100 Ω Such a reading should cause concern and should be investigated. However, if the electrical supply system is fed via overhead cables (known as a TT supply system) and an earth is provided via a spike driven into the ground, then the reading may normally be considered as acceptable.

<200 Ω For any other supply system than a TT (as discussed above) this must be considered as a serious earth fault and should be investigated and corrected. Where a TT supply system is employed, providing the circuit is also protected by a Residual Current Device (RCD) rated at either 30mA or 100 mA then the reading may normally be considered as adequate.

>200 Ω Any results exceeding 200 Ohms need to be investigated and resolved as a matter of urgency.

NOTE: In the event of a concern about an electrical installation please consult a qualified electrician.

Note: This test is only performed after the instrument has first proved that the wiring is connected correctly (i.e. All correct wiring indicators are continuously green).

While the voltage is being checked, the two outer red LED's of the voltage indicator will be briefly illuminated. On completion of the check, the actual voltage range will be indicated by the appropriate LED as shown in Figure 4 below. The supply voltage can be considered correct if the centre green LED is lit, indicating a voltage between 207 & 253 V AC. Other voltage range indications should be investigated accordingly.

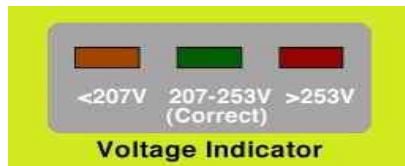


Figure 4.

4.3 Earth - Loop Test.

After confirming correct voltage, press and release the Earth Loop Test Switch Button. The outer two ($<1 \Omega$ & $>200 \Omega$) LED's of the Earth Loop Indicator (See Figure 5) will illuminate briefly while the test is being undertaken. On completion of the test, the LED indicating the measured Earth-Loop Impedance will remain illuminated.

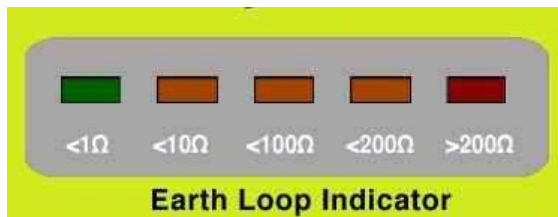


Figure 5.

3.2 Top View



Figure 2.

The top of the instrument (see Figure 2) incorporates an IEC type connector that is used to connect the test leads (supplied) to the unit.

3.3 Test Leads.



Figure 3a Test Lead with 13 Amp Plug

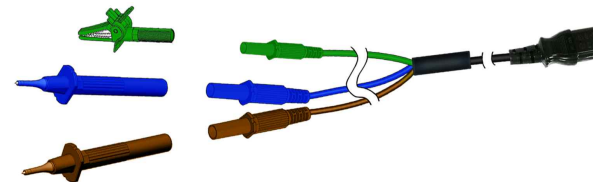


Figure 3b Test Lead with 3 separate probes

Two test leads are supplied with the instrument (see Figure 3a & 3b). Both incorporate an IEC connector at one end, which connects to the socket on the top of the instrument. One test lead has a UK style 3 pin plug at the other end, which can be

used to perform testing via socket outlets of the electrical circuit to be tested. The other test lead incorporates 3 separate test probes at the other end of the lead, which enables testing from all other locations other than where a Socket Outlet is available e.g. at the point of connection to separate components such as pumps or fans etc.

Before use, the instrument case, its test leads and probes should be checked for signs of damage or wear and if any damage is identified should not be used until repaired or replaced. The plug is fitted with a 13 Amp fuse and should be checked and replaced as necessary if the unit fails to operate while connected to a known powered circuit.

3. Using the Multi-function Earth - Loop Tester

Warning.

The TPI Multi-Function Tester is a mains powered instrument and does not rely on an internal battery. There are no user serviceable or replaceable parts within the instrument. Removal of the cabinet cover will invalidate the warranty.

The Multi-Function tester automatically self checks and starts its series of tests as soon as it is connected to a 'live' power supply. The tests are conducted in the following order.

4.1 Correct Wiring Test

Connect the instrument to the circuit to be tested and energise the circuit. The instrument will automatically 'self test' and check the Earth, Live and Neutral connections at the point of connection. During the tests a series of short bleeps will be heard and the Light Emitting Diodes (LED's) will flash.

Providing no problems are identified with the circuit under test, the three green LED's of the correct wiring indicator will remain

continuously on a continuous tone will be emitted for 3 seconds. If there is a wrong connection or a wire not connected, the LED's will be flashing and an intermittent bleep will be heard whilst the instrument remains connected to the power supply.

Fault conditions, showing the colours of the flashing LED's for most normal fault conditions are shown in the chart on the front of the instrument, immediately above the 'Correct Wiring Indicator' as shown in Figure 3. Full details of all fault conditions as shown in the Fault Conditions Indication Chart - Appendix 1

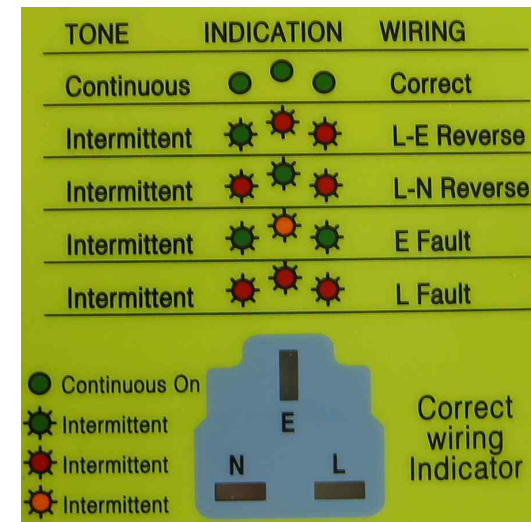


Figure 3.

4.2 Voltage Indicator.

After checking and confirming correct wiring, the instrument will automatically check the supply voltage.